



RF11 R Smart Guard Remote 11 Driver

Installation and Usage Guide

Revision: 3.0
Date: Monday, July 10, 2017
Authors: Alan Chow

Contents

Overview	2
Features	3
Change Log	4
Driver Installation.....	4
Adding the driver to your project	5
Advanced Programming.....	8
Events.....	8
Actions	9
Licencing.....	10
Summary	10
STEP 1 - Creating your project on driverCentral	10
STEP 2 –Purchase driver licence	12
STEP 3 – Install and activate the driverCentral cloud driver.....	13
STEP 4 – Install Chowmain driver.....	14

Overview

The Thor Smart Guard Remote 11 driver for Control4 allows integration of the Smart Guard Remote 11 including monitoring and control over the two controlled circuits with feedback on circuit health.

Features

Control & Feedback

- Circuit 1 – 7 x AS/NZS 3112 sockets
- Circuit 2 – 4 x IEC sockets

Beeper control

- Circuit 1 – Enable or Disable
- Circuit 2 – Enable or Disable

Events Triggered on

- Circuit 1 Damaged
- Circuit 1 Back to Nominal State
- Circuit 2 Damaged
- Circuit 2 Back to Nominal State
- Circuit 1 Turned On
- Circuit 1 Turned Off
- Circuit 2 Turned On
- Circuit 2 Turned Off
- Alarm Starting to Buzz
- Alarm Stopped Buzzing

Programming Actions

- Turn Circuit 1 On
- Turn Circuit 2 On
- Turn Circuit 1 Off
- Turn Circuit 2 Off

Bindings

- Circuit 1 Relay / Circuit 2 Relay

Change Log


MAY 11 2017 – Initial Release

Driver Installation

1. The driver you have downloaded will be in a zip file. Double click on this file to open it in your preferred zip program (WinZip, WinRar, etc.).



2. Extract the c4i file to the My Documents\Control4\Drivers directory. If you are using Windows 7 or 8 this will be extracted to the Libraries\Documents\Control4\Drivers directory.

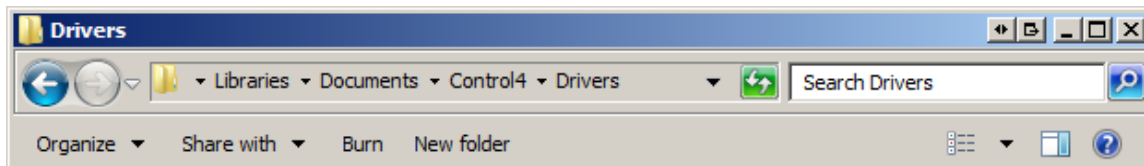

3. You are now ready to add and configure the driver via the Composer Pro software.

Adding the driver to your project

IMPORTANT – Before undertaking the installation of the driver please follow the licencing steps outlined at the end of this document.

1. Launch the Composer Pro application and connect to your project
2. In the '**System Design**' page select the '**Search**' tab on the right hand side.
3. Type in **thor** in the search field

☒ Local
 ☒ Online
 ☐ Certified Only

-- All Device Types --
-- All Manufacturers --

Results
Sort by: Relevance

RF11 R Smart Guard Remote 11		
Thor		RF11R
others	5/08/2016 12:00 P	Local

4. Double click on the '**RF11 R Smart Guard Remote 11**' driver to add it to your project
5. Highlight the '**Intelligent PDU**' driver on the left hand side.
6. Enter in the IP address or hostname for the device.

IP Address

- Enter the username and password (note the default username and password is prepopulated).

Username	admin
Password	*****

- If you want change the poll interval.

This is used to get feedback on the state of the device including state, health and alarm. Note if Control4 turns an outlet on or off feedback is instant.

Poll Interval (Seconds)	30
--------------------------------	----

- You can also modify the buzzer state in the properties rather than via the web interface.

Circuit 1 Buzzer	Enabled
-------------------------	---------


- The properties page will also provide you with an overview of the status

Alarm State	Off
Circuit 1 State	Off
Circuit 1 Health	Nominal
Circuit 1 Buzzer	Enabled
Circuit 2 State	Off
Circuit 2 Health	Nominal
Circuit 2 Buzzer	Enabled

- If you do not want the outlets to display in Navigator skip to step 19.

- Click on My Drivers on the right hand side.

13. Under Motorisation double click on the device type you want to use (note this will be the icon for your device).

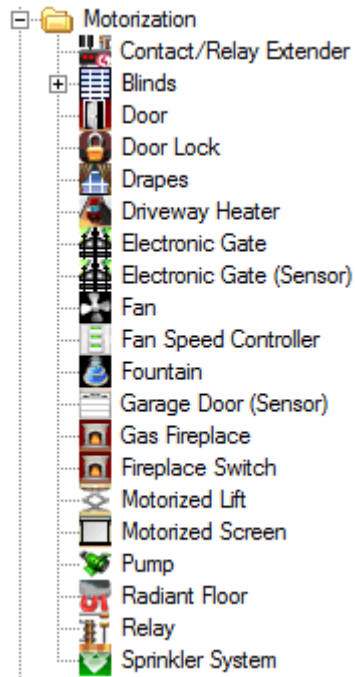



14. In the motorised device properties make sure that it is set to hold type and not pulse type.

15. Click on the Connections tab.



16. Highlight driver on the left hand side.

17. Bind the Relay to the device outlet is it connected to.

Name	Type	Connection	Input/Output	Connected To
Control Outputs				
 Circuit 1	Control	RELAY	Output	Relay->Relay
 Circuit 2	Control	RELAY	Output	Relay 2->Relay

18. Click on the File and Refresh Navigators. Congratulations you have set up Thor RF11 R.

Advanced Programming

Events


The driver also has the ability to detect various events on the Thor RF11 R.

1. Click on the Programming Tab.



2. Highlight the RF11 R Smart Guard Remote 11 on the Device Events side of the screen.

3. Within the RF11 R Smart Guard Remote 11 Events click the radio button and then on the drop down box.

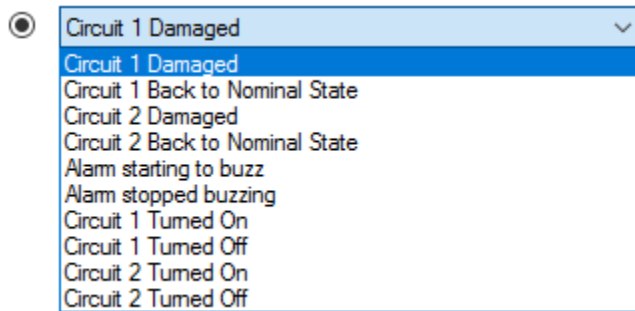

4. Program in the actions you wish to perform when this event occurs.


5. Congratulations you have completed programming an event.

Actions


1. Click on the Programming Tab.




2. Click on the event you wish the action to fire on.

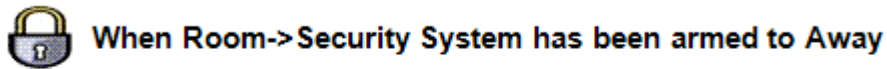

3. Highlight the RF11 R Smart Guard Remote 11 on the Device Actions side of the screen.
4. Within the RF11 R Smart Guard Remote 11 Actions click the radio button and then on the drop down box.

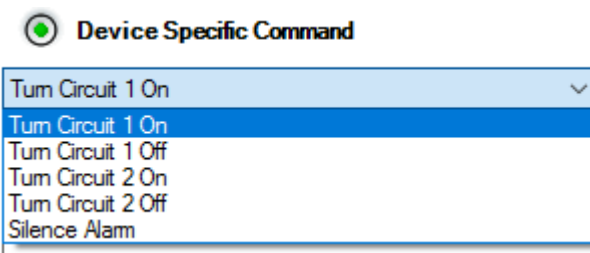

5. Select the action you want
6. Drag the Green Arrow into the script.

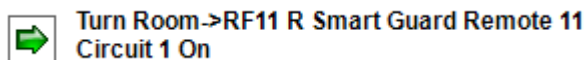

7. Congratulations you have completed programming an action.

Licencing


Chowmain drivers require a valid licence to use the driver. Drivers can be purchased from our distributor [driverCentral](#) however all Chowmain drivers come with a 7 day trial. We recommend that prior to purchasing a driver that you test the driver out to ensure that it will work with your hardware and will meet your requirements. The licencing procedure is broken down into 4 steps. A summary of the steps are below along however we have also provided detailed steps if the summary is not sufficient.

Summary

1. Create your project on the driverCentral.io website (This will generate a specific token which you will use in the next step)
2. Download, install and activate the driverCentral cloud driver in your project (Only once per project. Use the token generated in step 1)
3. (Optional) To try a driver, simply download it and install it in your project
4. To purchase a driver:
 - a. On driverCentral, purchase a license and register it to your project
 - b. If the driver is not already installed in your project, download it and install it
 - c. If necessary, use the cloud driver's Action: "Check Drivers" to force licence download to the project.


STEP 1 - Creating your project on driverCentral

1. Visit <http://www.drivercentral.io>
2. Log into your driver Central dealer account.
3. Visit the Project Portal
4. Click on Create Project

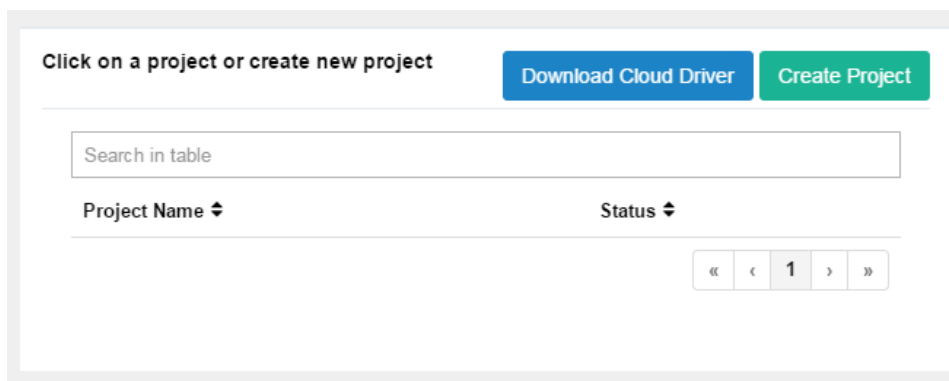

The screenshot shows the 'Project Portal' interface. At the top, there is a header with the text 'Click on a project or create new project' and two buttons: 'Download Cloud Driver' (blue) and 'Create Project' (green). Below the header is a search bar labeled 'Search in table'. Underneath the search bar, there are two columns: 'Project Name' and 'Status', both with a dropdown arrow. At the bottom right, there is a pagination control showing '«', '<', '1', '>', and '»'.

- It will prompt you for a project name. Type in a meaningful name for your customer's project

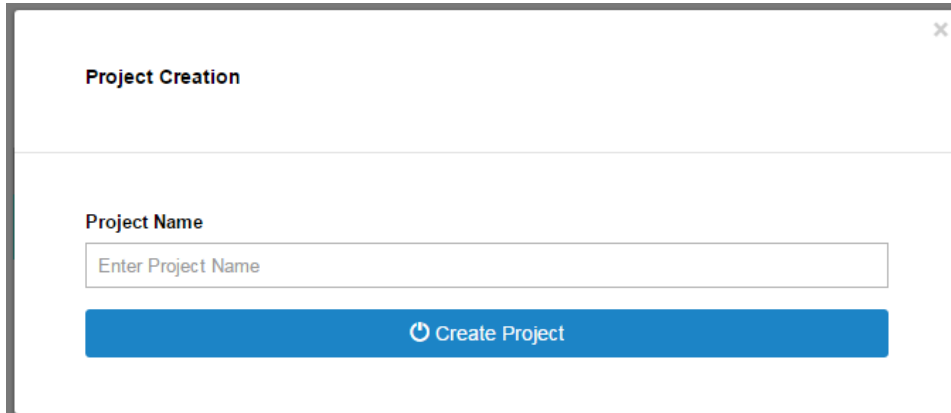


Project Creation

Project Name

Enter Project Name

Create Project

- Click on Create Project
- Click on the project we just created to expand the project

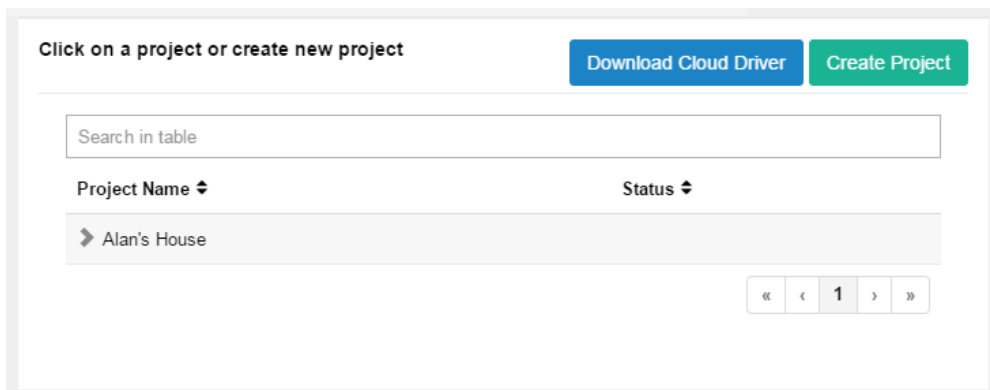

Click on a project or create new project

Download Cloud Driver Create Project


Search in table

Project Name Status

Alan's House

« < 1 > »

- Take note of the Project Token as this will be used in STEP 3 when we install the driverCentral cloud driver.

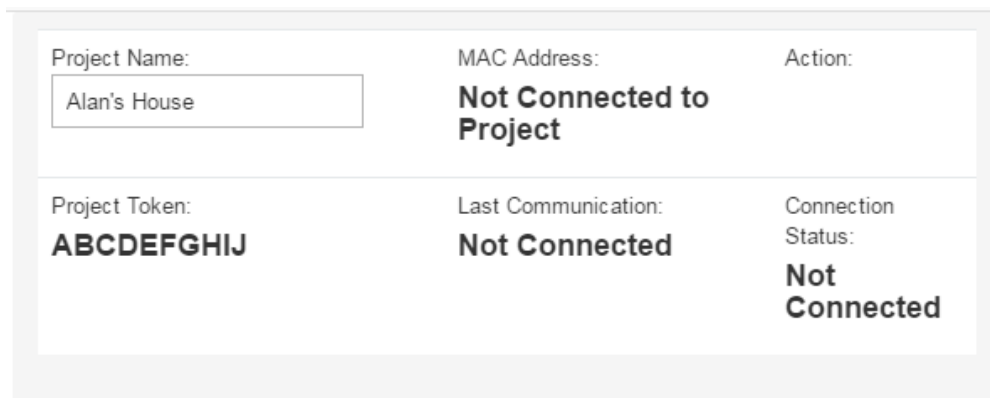


Project Name: Alan's House	MAC Address: Not Connected to Project	Action:
Project Token: ABCDEFGHIJ	Last Communication: Not Connected	Connection Status: Not Connected

STEP 2 –Purchase driver licence

1. Visit <https://www.drivercentral.io/chowmain-ltd/> and find the product/driver you want to purchase a licence for.
2. Click on the Add to Cart button



3. Click on the Shopping Cart icon in the top right corner and click on View cart

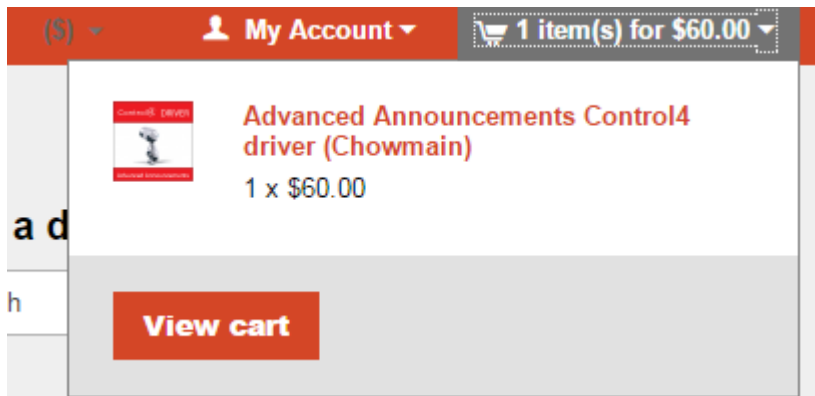


4. Confirm that your order is correct and click on Proceed to checkout




5. Follow the prompts and click on Submit my order



6. This will take you to PayPal for payment.
7. Pay via PayPal. It will automatically return to the marketplace when confirmed.
8. You will now be at a page where you can see your purchased licence.

License Name ↕	License Key ↕	Project Assigned ↕	Action ↕
			<button>Assign to Project</button>

- From here assign the licence to the project we created or if you did not follow that step create a new project

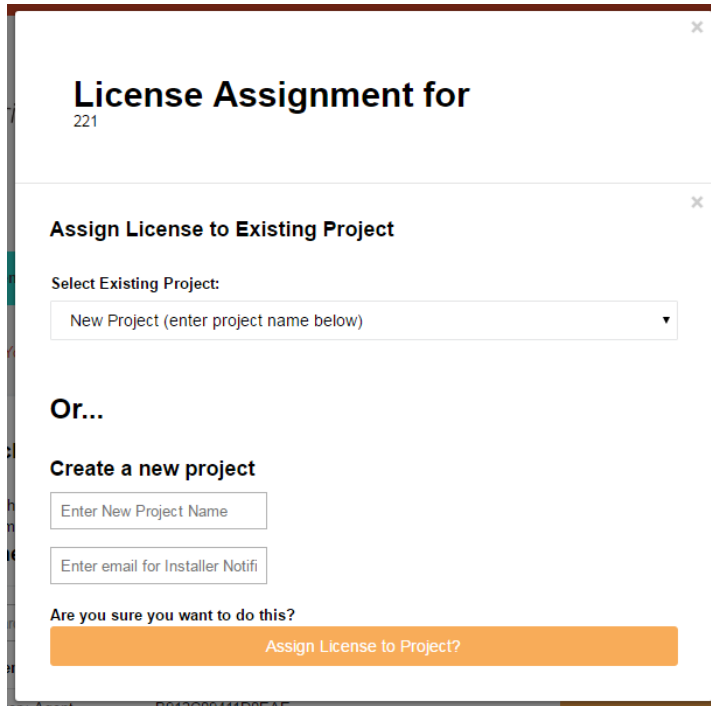

License Assignment for
221

Assign License to Existing Project

Select Existing Project:
New Project (enter project name below) ▼

Or...

Create a new project


Enter New Project Name
Enter email for Installer Notifi

Are you sure you want to do this?
Assign License to Project?

STEP 3 – Install and activate the driverCentral cloud driver

NOTE: Only one instance of the driverCentral cloud driver installed per project. Do not install additional cloud drivers.

- Visit <http://www.drivercentral.io>
- Log into your driver Central dealer account.
- Visit the Project Portal
- Click on Download Cloud Driver

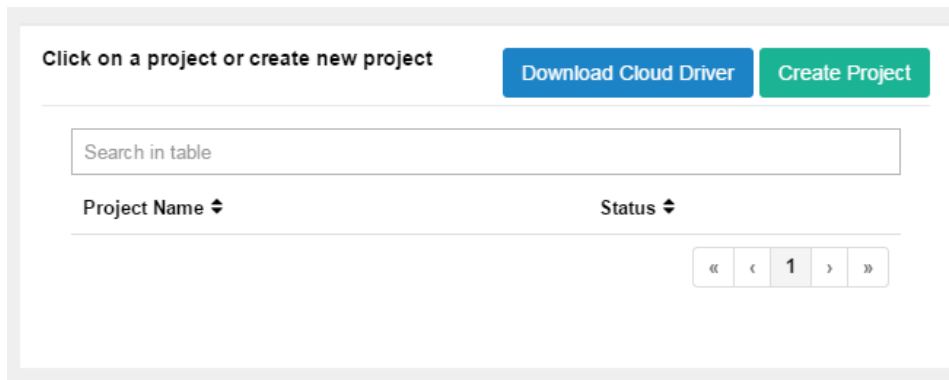

Click on a project or create new project

Download Cloud Driver Create Project

Search in table

Project Name ↕	Status ↕
« < 1 > »	

- Copy the C4Z driver to My Documents\Control4\Drivers directory.
- Add the driver to your project.

- Click on the driver to view it's properties

Cloud Status	Please enter cloud project token below...
Project Information	(1) Total, (0) Licensed, (0) Trials, (1) Expired, (0) Updates.
Driver Version	1001
Project Token	<input type="text"/>
	Project token from driverCentral.io project portal
Driver Actions	<input type="button" value="v"/>
Debug Mode	Off <input type="button" value="v"/>

- Type in the project token we took note of in STEP 1.
- Click on the Actions tab
- Click on Check Drivers

STEP 4 – Install Chowmain driver

- Install the Chowmain driver
- You will notice that the Activation Status reflects a Licence Activated state.
- Any driver that does not have a purchased licence will have a trial licence activated via the marketplace. Note that there is no way to reactivate the trial so please use wisely.
- If you do not then press the Check Drivers action in the driverCentral Cloud driver again.

Activation Status	Update Available!!! License Activated
Driver Version	1002
Driver Information	Navigate to connections tab and make serial binding
Automatic Updates	Off <input type="button" value="v"/>